

How to replace cartridge:

1. Remove the **Rubber Cover** (20) by slipping it off the back of the nozzle and pulling it over the front using a round tool: not a sharp tool, which can cut cover.
2. Remove the **Lever Arm Screw & Nut** (24) and the **Lever Arm** (6).
3. Unscrew **Lock Screw** (30) and extract the **Cartridge** from back end of nozzle with **Cage** (18).
4. Be sure when replacing **Cage** (18) to place cut-away part of **Cage** facing downward, so **Lever Arm** (6) can be inserted.
5. To insert new cartridge, reverse order beginning with 4-1 above and then proceed to 6.
6. Be sure **Lever Arm** (6) is placed ahead of **Stem Guide** (31) on cartridge unit.
7. To replace **Rubber Cover** (20) wipe body with detergent, insert nozzle end first then handle into cover. Use a round ended tool approx. 3/8" in diameter to stretch cover over back. Do not use sharp tool. Sharp tools can cut cover.

WATER-SAVER SPRAY NOZZLE

Assembly Instructions for

M-70, S-70, E-76, S-76, S-80, F-90 & S-90 SERIES



ESTABLISHED 1921

STRAHMANVALVES.COM

WORLD HEADQUARTERS
STRAHMAN VALVES, INC.

2801 BAGLYOS CIRCLE, BETHLEHEM, PA 18020

P: +1 484.893.5080 F: +1 484.893.5099 E: STRAHMAN@STRAHMAN.COM

UNITED STATES • FRANCE • GERMANY • CHINA • HONG KONG



ISO 9001
ONE-ONE Global




ASSEMBLED AND/OR MADE IN THE USA



WDEWSNZASSY062020



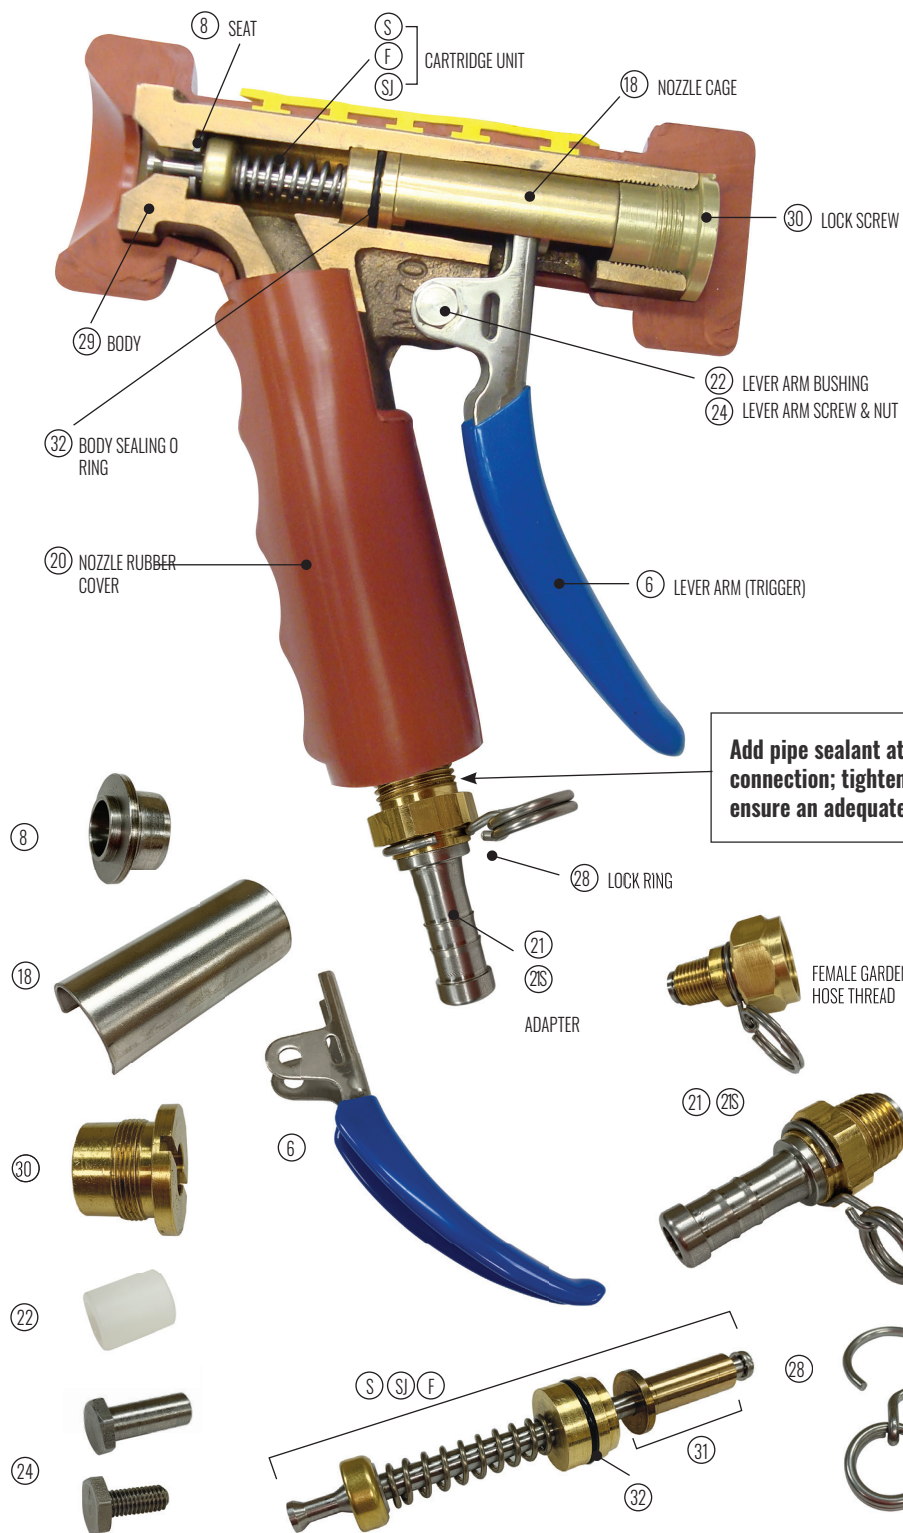

20B RUBBER COVER - BLACK



20R RUBBER COVER - RED



20W RUBBER COVER - WHITE

INSTRUCTION FOR SERVICING SPRAY NOZZLE:

The entire working parts of the Strahman Water-Saver Spray Nozzle are contained in a Single Cartridge Unit.

CAUTION—NOT FOR USE ON STEAM HOSE.

(Instructions on back page.)

PARTS LIST

ITEM	PART NUMBER	DESCRIPTION	M-70	S-70	E-76	S-76	S-80	S-80SS	F-90	S-90
8	WSSEAT	SEAT, SS 303	√	√	√	√	√	√	√	√
18	WSCASS	NOZZLE CAGE, SS 304	√	√	√	√	√	√	√	√
30	LSCRBR	LOCK SCREW, BR C3600	√	-	√	-	√	-	√	-
30	LSCRSS	LOCK SCREW, SS 303	-	√	-	√	-	√	-	√
22	LARMBU	LEVER ARM BUSHING NYLON	√	√	√	√	√	√	√	√
24	WLSLRP	LEVER ARM SCREW, SS 303	√	√	√	√	√	√	√	√
24	WLSLNU	LEVER ARM NUT, SS 303	√	√	√	√	√	√	√	√
6	LEVER ARM - BLUE (BL); YELLOW (Y); ORANGE (O)		BL	BL	BL	BL	Y	Y	BL	O
29	BODY, BRASS C83600		√	-	√	-	√	-	√	-
29	BODY, STAINLESS STEEL 304		-	√	-	√	-	√	-	√
20	NOZZLE RUBBER COVER - BLACK (B); RED (R); WHITE (W)		√	√	√	-	√	√	√	√

ADAPTER PARTS

21S	G075BR	¾" FGHT SWIVEL HOSE	√	√	√	√	√	√	√	√
21S	SWADAP0500BR	½" BARB SWIVEL ADAPT.	√	√	√	√	√	√	√	√
21S	SWIVADAP0063BR	⅝" BARB SWIVEL ADAPT.	√	√	√	√	√	√	√	√
21S	SWIVADAP0075BR	¾" BARB SWIVEL ADAPT.	√	√	√	√	√	√	√	√
21	WSADAPTERCOM- PLETE0003	¾" FGHT RIDGID ADAPT.	√	√	√	√	√	√	√	√
21	BARB0050BR	½" BARB RIDGID ADAPT.	√	√	√	√	√	√	√	√
21	BARB0063BR	⅝" BARB RIDGID ADAPT.	√	√	√	√	√	√	√	√
21	BARB0075BR	¾" BARB RIDGID ADAPT.	√	√	√	√	√	√	√	√
28	WSLRNG	LOCK RING, SS302	√	√	√	√	√	√	√	√

REPLACEABLE CARTRIDGE UNIT

M70	M70CARTBR	REPLACEABLE CARTRIDGE	√	√	√	-	-	-	-	-
M	WSS76CART0000	REPLACEABLE CARTRIDGE	-	-	-	M	SJ	SJ	-	-
F	WSF90CART0000	REPLACEABLE CARTRIDGE	-	-	-	-	-	-	F	SF
31	STEM GUIDE (INSTALLED WITH CARTRIDGE)		√	√	√		√	√	√	√
32	BODY SEALING O RING (INSTALLED W/CARTR.)		√	√	√		√	√	√	√